



HYDRAULIC CABLE CUTTER

"CC0260"



LARZEP, S.A.
Avenida Urtiaga, 6
48269 Mallabia, Spain
Tel. +34 943 171200
Fax. +34 943 174166
e-mail: info@larzep.com
www.larzep.com

INDEX

1. BEFORE USING THE EQUIPMENT -----2
2. TECHNICAL FEATURES----- 2-3
3. ESSENTIAL SAFETY REQUIREMENTS -----4-5
4. START-UP-----5
5. MAINTENANCE -----6
6. WARRANTY -----6
7. DECLARATION OF CONFORMITY -----7

ANNEX

- GENERAL DRAWING

1. BEFORE USING THE EQUIPMENT

Remove the tool from its packaging and check for external damage, such as:

- a broken cutting blade.
- a damaged levers.
- a loosed/unscrewed parts.

LARZEP hydraulic tools are designed in accordance with internal quality standards, in compliance with the ISO 9001 regulation.

The tools are designed for the applications described in this manual. Any other use may pose a risk to the equipment and result in hazardous situations for the operator.

The manufacturer accepts no responsibility for damage resulting from the improper use of the tool

Check that the machine and accessories have not been damaged in any way during transportation to the plant.

Always use the tools in well-lit areas.



Never use hydraulic equipment that is damaged or suspected to be in poor condition

The tools are designed for the applications described in this manual. Any other use may pose a risk to the equipment and result in hazardous situations for the operator. The manufacturer accepts no responsibility for damage resulting from the improper use of the tool.

The operator should be fully aware of the risks inherent in the use of high-pressure hydraulic tools, and should act responsibility in accordance with that described in this manual, ensuring both his/her own safety as well as the safety of others located in the vicinity of the working zone.



Do not loose instruction manual

The working instructions should be available for consultation by the operator at all times.

In addition to reading and understanding the instructions manual, the operator should be trained in the use of the machine and in the standards and regulations governing operations of this kind, such as those pertaining to accident prevention and environmental protection, for example. All exposed personnel should use appropriate personal protection equipment: boots, helmet, goggles, gloves and protective clothing.



Boots



Helmet



Goggles



Gloves



Clothes

2. TECHNICAL FEATURES


The tools in the CC cable cutter range are designed to cut cables and bars in accordance with the specifications contained in the table below. Any other use not included in the said specifications may cause irreparable damage to the cutter and render it unable to carry out the task for which it was designed.

When using the cable cutter, the operator should take steps to prevent the cable from fraying. We recommend that, before commencing the cutting operation, the cable be attached to either end of the cutting zone, using tape, wire or another similar means.

The operator should take appropriate steps at all times to prevent exposure to flying particles of cable or bar generated during the cutting process (personal protection equipment, protection screens, etc.).

MODELS WITHOUT BUILT-IN PUMP:

MODELS		CC0118	CC0140	CC0175	CC0190	CC01120	CC0160	CC0260
CAPACITY	kN	70	135	70	109	109	437	390
PRESSURE	bar	700	700	700	700	700	700	700
WIRE ROPE (ALUMINIUM)	mm	18	40	40	35	35	60	60
CABLE	Telephone ø Ext. mm	18	40	75	90	120	60	60
	Lead ø Ext. mm	18	40	75	90	120	60	60
	Underground ø Ext. mm	18	40	75	90	120	60	60
STEEL ROPE MAX.R = 1800 N/mm ²	ø Ext. mm	18	32	-	-	-	60	60
	Wire ø mm	1	1	-	-	-	2	2
BLADE		CRC18	CRC35-40	CRC75	CRC0190	CRC01120	CRC0160	CRC0160
DIMENSIONS	L mm	212	292	451	535	635	388	480
	C mm	18	40	75	90	120	64	64
WEIGHT	kg	2	5,3	5,5	10	11,7	15,8	24,6

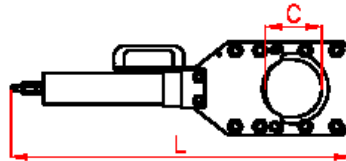

3. ESSENTIAL SAFETY REQUIREMENTS

- In the event of the improper working of the machine or one of the connected elements, immediately halt all operation, depressurise the system and resolve the problem.
- Before beginning operation, make sure that the danger zone is unoccupied.



Check that the machine and accessories have not been damaged in any way during transportation to the plant.

- Always use the tools in well-lit areas.
- Regardless of whether the cutting tool has a built-in or separate pump, try to establish the most convenient and stable working method for both the tool and the operator.



Allow for a general use at 80% of the tool's nominal capacity. Do not exceed the tool's nominal capacity. In the case of tools with separate pumps, we recommend the use of a pressure indicator, in order to enable the operator to monitor at all times the force to which the system is subjected.

- It is quite possible that when cut, the work piece may project particles and fragments. Therefore, the operator should protect his/her body and (particularly) eyes using appropriate protective equipment.



Goggles



Face Protection

- In the case of tools with a separate pump, the hose enables the operator to move further away from the danger zone, while in the case of tools with built-in pumps, if possible, a guard should be positioned between the work piece and the operator.
- Do not expose tools to intense heat sources, such as welding equipment, for example.
- Depressurise and disconnect the tools before carrying out any maintenance operations
- The controls of both the tools with built-in pumps and the separate pumps themselves should always be activated manually. Do not use hand tools, levers, etc. to work the controls.
- In the case of tools with separate pumps, make sure all the quick plugs are completely clean before connecting.
- Make sure that the hydraulic hoses are neither twisted nor unduly tensed.
- When working with an electric pump, make sure that the valve is set to its neutral position before connecting the tool.
- When working with cable cutters, fraying may occur during the cutting operation. To avoid this, clamp the cable to either end of the cutting blade with tape, wire or even a bushing.
- Clean the quick plugs thoroughly before connecting.
- In all cases, the operator should be thoroughly trained in the operation of the tool and should act in accordance with the logical safety criteria associated with the use of high-pressure equipment.

4. START UP

MODELS WITH A SEPARATE PUMP: CC0118, CC0140, CC0160, CC0175, CC0190, C01120 and CC0260

- 1- Connect the hose's female quick plug to the tool's male plug. Make sure the connection is secure.
- 2- Read and follow the pump instructions.
- 3- Remove the pin and open the tool head.
- 4- Place the material to be cut in the cavity of the counter-blade and close the head, fixing it in place with the pin. Make sure the pin is properly positioned.
- 5- Pump until the material is cut.
- 6- Move the blade back by activating the pump valve.
- 7- Pump until the material is cut.
- 8- When using electric or air-based pumps, the application is automated. In such cases, the operator should be specially trained, in order to avoid the possibility of involuntary actions.

5. MAINTENANCE

- After use, the tool should be cleaned and the area where the blade comes into contact with the heads oiled.
- In the event of oil leaks, disassemble the tool and change the seals. The individual blueprint provided for each tool specifies its components and codes.
- During this operation, check the condition of the inside of the cylinder. If scratches or snags are detected, then a more thorough repair procedure will be required. We recommend that this be carried out **by specialist personnel**.
- Check for loose nuts in the head.
- In the event of improper functioning in the models with built-in pumps, we recommend that you send the tool to an authorised technical service for inspection and repair.

CHANGING THE BLADE

Release the screw (20) and remove the blade (19). Replace the blade with a new one and attach to the piston by tightening the screw once again.

6. WARRANTY

LARZEP, S.A. guarantees its products against all design and manufacturing defects for the durations of two years from the date of purchase. This guarantee does not include the ordinary wear of both metal and non-metal parts, abuse, using the equipment beyond its rated capacity and any wear or damage incurred as a result of using a hydraulic fluid which is not recommended by **LARZEP, S.A.**

Please note that if the equipment is disassembled or serviced by anyone other than an authorized service dealer or by **LARZEP, S.A.**, this guarantee is rendered null and void.

In the event of a warranty claim, return the equipment, to **LARZEP, S.A.** or the authorized dealer which sold you the hydraulic equipment, **LARZEP, S.A.** will repair or replace the faulty equipment, whichever is deemed most appropriate. **LARZEP, S.A.** shall not be held liable for any consequential damages or losses, which may occur as a result of faulty equipment

7. DECLARATION OF CONFORMITY

DECLARACION DE CONFORMIDAD

E

LARZEP, S.A.
Dirección: Avda. Urriaga, 6
48269 Mallabia ESPAÑA

Declaramos bajo nuestra exclusiva responsabilidad la conformidad de los productos a los que refiere esta declaración, con las disposiciones de la directiva: 2006/42/CE

DECLARATION OF CONFORMITE

F

Nous, LARZEP, S.A.
Adresse: Avda. Urriaga, 6
48269 Mallabia SPAIN

Déclarons sous notre seule responsabilité que les produits auxquels se réfère cette déclaration sont conformes aux dispositions des Directives: 2006/42/EC

DECLARAÇÃO DE CONFORMIDADE

P

Nós, LARZEP, S.A.
Endereço: Avda. Urriaga, 6
48269 Mallabia SPAIN

Declaramos, sob nossa única responsabilidade, que os seguintes produtos, incluídos nesta declaração estão em conformidade com o disposto na Directiva: 2006/42/EC

ÖVERENSSTEMMELSEERKLÆRING

DK

Vi, LARZEP, S.A.
Adresse: Avda. Urriaga, 6
48269 Mallabia SPAIN

Erklærer på eget ansvar, at følgende produkter som er omfattet af denne erklæringen, er i overensstemmelse med bestemmelserne i Direktiv: 2006/42/EC

ERKLÆRINGOM OVERENSSTEMMELSE

N

Vi, LARZEP, S.A.
Adresse: Avda. Urriaga, 6
48269 Mallabia SPAIN

Erklærer på eget ansvar, at følgende produkter som dekkes av denne erklæringen, er i overensstemmelse med bestemmelserne i Direktiv: 2006/42/EC

KONFORMITÄTSEKTLÄRUNG

D

Wir, LARZEP, S.A.
Anschriřt: Avda. Urriaga, 6
48269 Mallabia SPAIN

Erklären aufeigene Verantwortung, daß folgende Produkte, auf die sich diese Erklärung bezieht, mit den Bedingungen der Direktiven, 2006/42/EG übereinstimmen.

Tipo, Type, Typ, Tyyppi.

SM / SAM / SH / SAH / SP / SMP / SPR / SX / SMX / STR / SAT / SATM / STX / SL / SSR / T / TE / TD / D / DDR / DDA / DH / DAH / DM / DI / JM / JP / JH / DL / SLX

W / WA / WP / X / Z / ZR / HAM / HAE / HAZ / HAG / HAS / HFM / HFE / WI / HAP / HAB / HAT / HBM / HBE / WAP / WIP / HEP

AP / AR / AZ / AV / AVD / AVT / AT / ATH / AY

CK / CC / CN / FU / FV / FZ / FA / CY / CT / C / AA / AU / BS / LS / LX / PH / CB / CH / CM / CX

A / AB / AC / AF / B / DLG / DLR / F / HN / HL / VA / VB / VC / VZ / EC / EE / EM / EZ / CA

Mallabia, ESPAÑA 2018 / 04 / 12

Lugar y fecha, place and date, lieu et date, plats och datum, paikka ja päivämäärä, udstedelsessted og-dato, ort und datum, plaats en datum, local e data, luogo e data.

DECLARATION OF CONFORMITY

GB

We, LARZEP, S.A.
Address: Avda. Urriaga, 6
48269 Mallabia SPAIN

Declare under our sole responsibility that the following products to which this declaration relates conform with the provisions of Directives: 2006/42/EC

DICHIARAZIONE DI CONFORMITÀ

I

Noi, LARZEP, S.A.
Indirizzo: Avda. Urriaga, 6
48269 Mallabia SPAIN

Dichiariamo sotto la nostra esclusiva responsabilità che i prodotti ai quali questa dichiarazione si riferisce sono conformi quanto previsto dalle Direttive: 2006/42/EC

VAATIMUSTEMUKAISUUSVAKUUTUS.

FIN

Me, LARZEP, S.A.
Osoite: Avda. Urriaga, 6
48269 Mallabia SPAIN

Vakuutamme yksinomaan omalla vastuullamme, että seuraavat tuotteet, joihin tämä vakuutus liittyy, ovat seuraavien Direktiivien vaatimusten mukaisia: 2006/42/EC

VERKLARINGVAN OVEREENKOMST.

NL

Wij, LARZEP, S.A.
Adres: Avda. Urriaga, 6
48269 Mallabia SPAIN


Verklaren geheel onder eigen verantwoordelijkheid dat de volgende producten, waarop deze verklaring heeft in overeenstemming zijn met de bepalingen van Richtlijn: 2006/42/EC

FÖRSÄKRAN OM ÖVERESSTÄMMELSE

S

Vi, LARZEP, S.A.
Adress: Avda. Urriaga, 6
48269 Mallabia SPAIN

Försäkrar under eget ansvar att följande produkter som omfattas av denna försäkran är i överensstämmelse med villkoren i Direktiv: 2006/42/EC



Juan Carlos Bustos

Nombre y firma, name and signature, nom et signature, namn och underskrift, nimi ja nimikirjoitus, navn og underskrift, name und underskrift, naam en handtekening, nome e assinatura, nome e firma.

MODEL	CAPACITY	LENGTH	WEIGHT	WIRE ROPE	CABLE	STEEL ROPE
CC0260	390 KN	480 mm	12 Kg.	16x19 mm 12x19 mm 12x19 mm	16x19 mm 12x19 mm 12x19 mm	16x19 mm 12x19 mm 12x19 mm

N°	DESCRIPTION	CODE	QUANTITY
1	SHOULDER ASSEMBLY	560C060	1
2	CYLINDER	DD4007	1
3	BALL O-S-S	31A0007	1
4	ALLEN SCREW M4x5 DN-912 8.8	14A0130	1
5	ELASTIC PIN DN-1461 D-3x14	14E0227	1
6	REMOVABLE PIN	15E0219	1
7	LINK CHAIN 6-2 A=8 L=18	24E0219	8
8	STANDARD WASHER FOR M4	52E0009	1
9	SCREWDRIVER INTERMEDIATE BASE	54E0017	1
10	SCREWDRIVER INTERMEDIATE BASE	54E0033	1
11	RIGHT GUIDE INTERMEDIATE BASE	24E0132	1
12	LEFT GUIDE INTERMEDIATE BASE	24E0132	1
13	RIGHT GUIDE BASE	24E0132	1
14	LEFT GUIDE BASE	24E0132	1
15	SLAVE GUIDE BASE	14E0115	4
16	SLAVE GUIDE BASE	14E0124	8
17	SELF-LOCKING NUT M12 DIN913	33E0024	1
18	ALLEN SCREW M8x15 DN-912 12.9	14A0153	2
19	BLADE	CGE0160	1
20	ALLEN SCREW M6x35 DN-912 12.9	14A0164	1
21	SAWET	14E0218	1
22	ELASTIC RING FOR 6-15 DN-471	14E0034	1
23	ALLEN STD M8x6 DN-913	14E0037	1
24	ALLEN STD M8x6 DN-913	13E0110	1

N°	DESCRIPTION	REFERENCE	CODE	N°
23	PISTON BODY	52D0415	52D0415	1
24	PISTON	53R0425	53R0425	1
25	GUIDE	55R0239	55R0239	1
26	O-RING 485.32x3.53	12C0095	12C0095	1
27	SECURITY VALVE 1.35Ckg/Cm2	17C0001	17C0001	2
28	WAL. VAL. O-RING 485.32x3.53	A23231	A23231	1
29	GUIDE RING 485.32x3.53	58R0203	58R0203	2
30	PISTON JOINT 485.32x3.53	08E0011	08E0011	1
31	GUIDING BAND A=15 E=2.5 L=0.191 m.	PR0300860-146N	12B0183	1
32	PISTON JOINT 485.32x3.53	PR0300860-146N	12B0183	1
33	GUIDE RING 485.32x3.53	58R0203	58R0203	1
34	SCREWDRIVER INTERMEDIATE BASE	54E0017	54E0017	1
35	O-RING 485.32x3.53	12C0095	12C0095	1
36	SECURITY VALVE	17C0001	17C0001	1
37	CONNECTOR	A21511	A21511	1

Author	VERSION	MODIFICACIONES	FECHA
PEDRO GOMEZ	03/04/2004	CORTADORA DOBLE EFECTO	

Author	VERSION	MODIFICACIONES	FECHA
PEDRO GOMEZ	30-1-04	CORTADORA DOBLE EFECTO	

Dimensiones en Bruto: Surteza
 Resistencia: Kg/mm²
 Paso en Bruto: Escala: 1:1
 Directorio

Tolerancias para las dimensiones en indicación en el dibujo:
 H7/k6
 H8/k7
 H9/k8
 H10/k9
 H11/k10
 H12/k11
 H13/k12
 H14/k13
 H15/k14
 H16/k15
 H17/k16
 H18/k17
 H19/k18
 H20/k19
 H21/k20
 H22/k21
 H23/k22
 H24/k23
 H25/k24
 H26/k25
 H27/k26
 H28/k27
 H29/k28
 H30/k29
 H31/k30
 H32/k31
 H33/k32
 H34/k33
 H35/k34
 H36/k35
 H37/k36
 H38/k37
 H39/k38
 H40/k39
 H41/k40
 H42/k41
 H43/k42
 H44/k43
 H45/k44
 H46/k45
 H47/k46
 H48/k47
 H49/k48
 H50/k49
 H51/k50
 H52/k51
 H53/k52
 H54/k53
 H55/k54
 H56/k55
 H57/k56
 H58/k57
 H59/k58
 H60/k59
 H61/k60
 H62/k61
 H63/k62
 H64/k63
 H65/k64
 H66/k65
 H67/k66
 H68/k67
 H69/k68
 H70/k69
 H71/k70
 H72/k71
 H73/k72
 H74/k73
 H75/k74
 H76/k75
 H77/k76
 H78/k77
 H79/k78
 H80/k79
 H81/k80
 H82/k81
 H83/k82
 H84/k83
 H85/k84
 H86/k85
 H87/k86
 H88/k87
 H89/k88
 H90/k89
 H91/k90
 H92/k91
 H93/k92
 H94/k93
 H95/k94
 H96/k95
 H97/k96
 H98/k97
 H99/k98
 H100/k99